

BMW DRIVER TAG

When and how to replace the battery

WHEN

If the BMW Driver Tag flashes intermittently, the battery must be replaced with a CR2450 battery.

HOW



Open the BMW Driver Tag with the help of a flathead screwdriver. Then replace the discharged battery with a new CR2450 battery.

Once the new battery is inserted, the BMW Driver Tag will flash to indicate correct installation. If this is not the case, remove the battery and repeat the process again.

If you have two BMW Driver Tags, the batteries must be replaced at the same time.