


MINI DRIVER TAG

When and how to replace the battery

WHEN

If the MINI Driver Tag flashes intermittently, the battery must be replaced with a CR2450 battery.

HOW

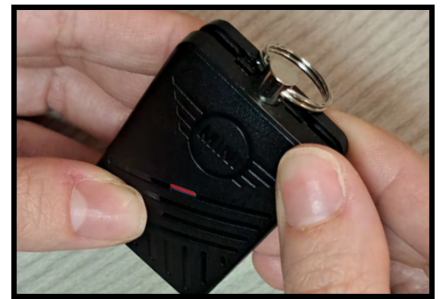

Open the MINI Driver Tag with the help of a flathead screwdriver. Then replace the discharged battery with a new CR2450 battery.

Once the new battery is inserted, the MINI Driver Tag will flash to indicate correct installation.

If this is not the case, remove the battery and repeat the process again.

If you have two MINI Driver Tags, the batteries must be replaced at the same time.