



DRIVER TAG

ROLLS-ROYCE GUARDIAN

WHEN TO REPLACE THE BATTERY

If the driver tag flashes intermittently, the battery must be replaced with a CR2450 battery.

HOW



Open the tag with the help of a flathead screwdriver.
Then replace the discharged battery with a new CR2450 battery.

Once the new battery is inserted, the tag will flash to indicate correct installation.
If this is not the case, remove the battery and repeat the process again.

If you have two tags, the batteries must be replaced at the same time.